


SO2 free limpid grape juice concentrate



Sterilization

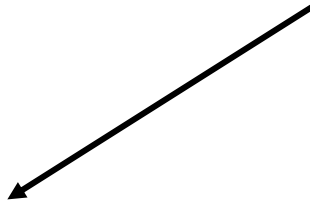

In line

Aseptic Filling Machine



Loading of the drums inside the
container

- Under nitrogen;
- Process temperature:
70° C for 30 seconds;
- The sterilizer machine is
connected with an aseptic
surge tank to avoid
product recirculation.

- The machine creates the
vacuum inside the sterile
bags and automatically start
filling the product. Once
finished the machine inject
nitrogen and close
ermetically the bag. The
head of the machine moves
to the next bags.
- Take off samples.

- Inspection of the container;
- Loading of the container.